





# **Tableware Care Guide**

Elegant dinnerware, shining cutlery, fresh linens and sparkling glassware make an impression on your customers that is almost as important as what is on your menu. As such, high-quality tableware is a big investment - protecting and maintaining this investment is essential to the success of your operation.

**Preparation** 


**Service** 

Washing

Storing

# **Preparation**

# **DOs**

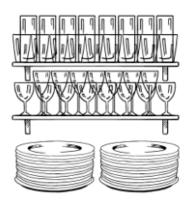

Always store the items so that they are ready to be used




Always use a plastic scoop to fill the glasses with ice cubes




## **DON'Ts**



Never use damaged or chipped items (these pose a risk to the user)

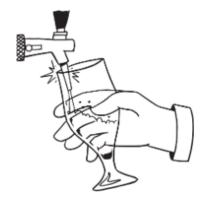

Never make contact between the glass and beer tap when pouring

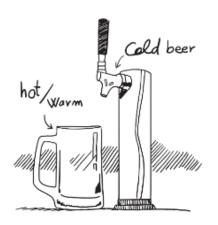

Never immediately use a hot glass (straight out of the dishwasher). Always allow to cool before use



Never fill a glass with a hot beverage unless it specifies that it may be used for that purpose.



Never allow dinnerware to be exposed to sudden temperature changes which exceed 130 °C



# **DOs**



Always discard damaged or chipped items



Always carry stem glasses by the upper portion of the bowl, not by the stem or foot

# **DON'Ts**



Never carry multiple stem glasses in one hand



A bottle should never make contact with the glass during service




#### **DOs**




Always wash the items before they are used for the first time




Always discard chipped, damaged or broken items

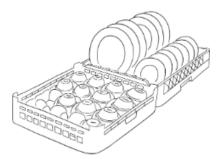

Always place individual items in their respective sections of the dishwasher or in adapted racks

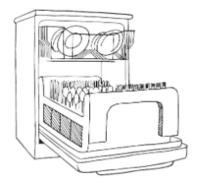

- Always wash the items as soon as possible to avoid stains
- Have the washing machine checked routinely and keep the machine clean in order to optimise the washing process
- Always use a cleaning detergent that is approved by the washing machine brand

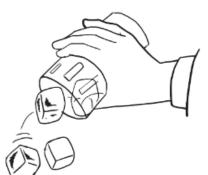

Always remove ice from glassware before cleaning. This allows the items to be nearer room temperature before washing thus avoiding a thermal shock





Always rinse the glasses before placing them in the washing machine



Always hold the stem glass by the stem and not by the foot when wiping

## **DON'Ts**



- Never overload the dishwasher racks
- Do not surpass the recommended amount of cleaning product



Do not mix glasses, plates and cutlery in the same rack



Never leave liquid in the bottom of a glass for prolonged period of time (2 hours maximum).




## **DOs**



Always store the items in adapted racks



- Separately store plates, cutlery and glassware
- Store cutlery in a drawer or enclosed space away from any humidity

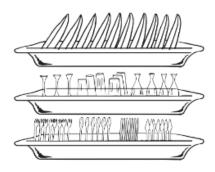


Always allow the items to cool down to room temperature after washing them, then dry them carefully before storing or using them again



Always use a glass hanger rack

# **DON'Ts**

 





Never place cutlery in glasses







## **ARC Distribution UK**



- 01386 552 551
- **a** aduk-orders@arc-intl.com

arctableware.com

**&** 

Terrace Road, Pinvin, Pershore Worcestershire, WR10 2DJ

